
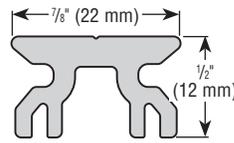


Sizing

Make sure that you have the correct size Battcar system for your boat.


Maximum Sail Area		System	Headboard	Part No. Battcars	Luff Car
Monohull	Multihull				
350 ft ² 33 m ²	300 ft ² 28 m ²	A Low Load	1807	1901, 1944, 1976, 1977	1777
425 ft ² 39 m ²	350 ft ² 32 m ²	A	1792 1807	1825, 1901, 1944, 1976	1894
550 ft ² 51 m ²	475 ft ² 34 m ²	A Hi-Load	1792HL	1825HL, 1901HL, 1944HL, 1976HL, 1977HL	1894HL

Parts List

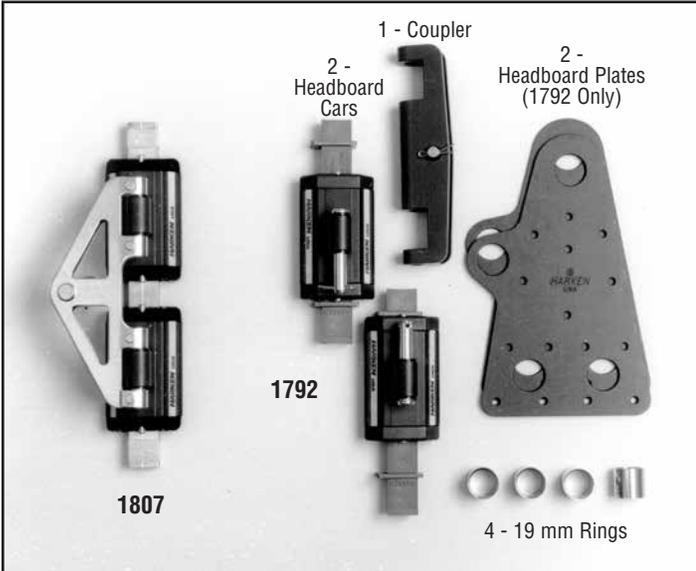

1800 TRACK, 6'8³/₄" (2.05 m) long: Number of sections will vary according to luff length.


Make sure you have the correct size track. System A track is 7/8" (22 mm) wide.

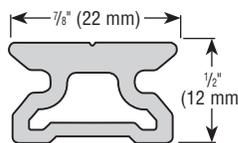


2720 Track: for drilling and tapping you must use 2720 track. Use 10-32 (5 mm) screws, not included.

Do not use 1800 open backed track for drilling and tapping the mast. This track must have the support of the mounting slugs.

See page 9 for mounting instructions.

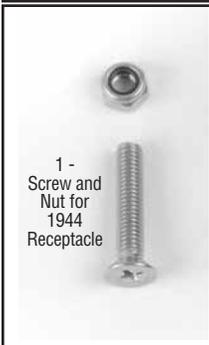


1 - Screw and Nut for 1944 Receptacle

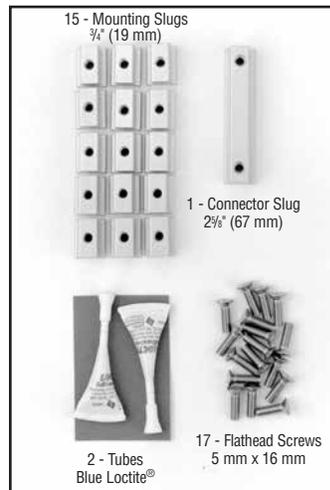

MOUNTING KIT

One required for each track.

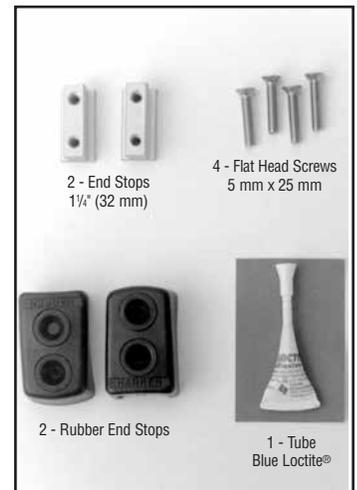

END KIT

One required for each system.

LUFF CARS

Luff cars not required if battens are close enough to support sail.

BATTCARS

Harken fitting is shown. You may have Battslide, Rutgerson or SDA batten receptacles supplied separately.

