


Installation and Maintenance Manual

MRW-G

Powered Radial Winch 50.2 ST EL/HY

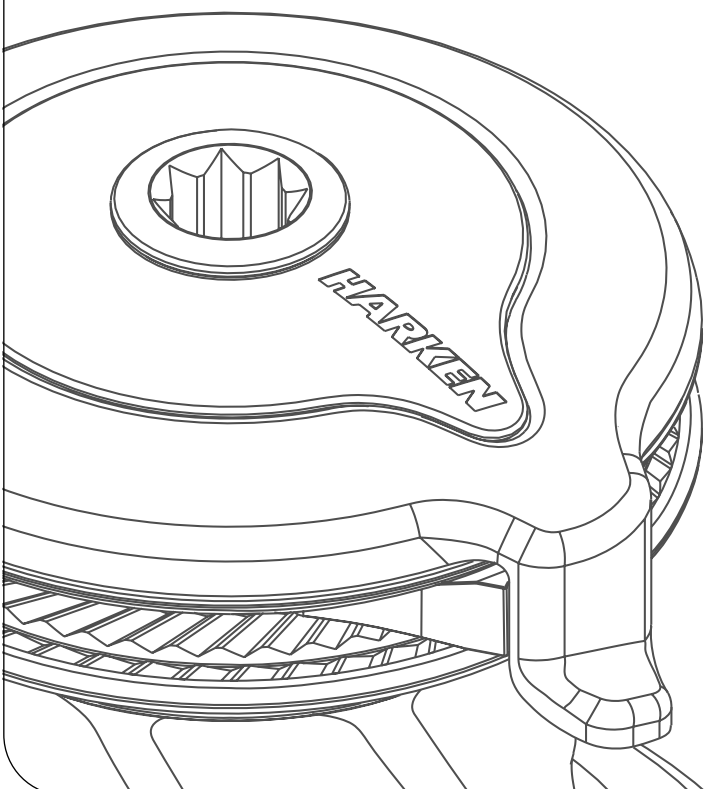

HARKEN[®]

Introduction	3
Technical characteristics	3
<i>Maximum working load</i>	3
<i>Performance data</i>	4
<i>Weight</i>	4
Outline	5
Installation	6
<i>Procedure 1</i>	7
<i>Procedure 2</i>	8
<i>Winch installation procedure</i>	10
<i>Positioning the self-tailing arm</i>	11
Motor installation procedure	11
<i>Electric wiring diagrams</i>	12
<i>Hydraulic connections diagram</i>	14
Maintenance	15
<i>Washing</i>	15
<i>Maintenance table</i>	15
<i>Disassembly procedure</i>	15
<i>Exploded view with maintenance products</i>	19
<i>Assembly</i>	20
Harken® limited worldwide warranty	21
Ordering spare parts	21
Exploded view	22
<i>Radial Winch 50.2 STA, STC, STCW EL/HY</i>	22
Parts List	24
<i>Radial Winch 50.2 STA EL/HY</i>	24
<i>Radial Winch 50.2 STC EL/HY</i>	25
<i>Radial Winch 50.2 STCW EL/HY</i>	26
Exploded view	27
<i>Radial Winch 50.2 STBBB, STCCC EL/HY</i>	27
Parts List	29
<i>Radial Winch 50.2 STBBB EL/HY</i>	29
<i>Radial Winch 50.2 STCCC EL/HY</i>	30
Exploded view and Parts List	31
<i>Horizontal electric motor 12V / 24V / 48V</i>	31
<i>Vertical electric motor 12V / 24V / 48V</i>	32
<i>Hydraulic motor</i>	33

Introduction

This manual gives technical information on winch installation and maintenance, including disassembling and reassembling.

This manual is available only in English. If you do not fully understand the English language, do not carry out the operations described in this manual.

This information is DESTINED EXCLUSIVELY for specialised personnel or expert users.

Installation, disassembling and reassembling of the winch by personnel who are not experts may cause serious damage to users and those in the vicinity of the winch.

Harken accepts no responsibility for defective installation or reassembly of its winches.

Installing third-party electrification kits voids the Harken® Limited Worldwide Warranty.

The installer is responsible for complying with all applicable safety regulations:

- Any residual risks must be analyzed based on the boat on which the system is installed and must be managed exclusively by the installing contractor.
- A safety management system must be implemented on each boat, including one or more emergency buttons.

The user remains responsible for the proper inspection and maintenance of each component of the system installed aboard.

Harken assumes no responsibility for the final design or the consequences of an accident.

In case of doubt the Harken Tech Service is at your disposal at techservice@harken.it

NOTICE

To use and understand this manual, user must refer to other documents, available on web site www.harken.com and listed below:

- The Dual Function Control Box user manual, for the use of the Dual Function Control Box.
- The Dual Function Control Box installation manual, for all details, informations, wiring schemes and warnings about its installation

Technical characteristics

	Power ratio	Gear ratio
1st speed	11,10 : 1	2,40 : 1
2nd speed	50,40 : 1	10,90 : 1

The theoretical power ratio does not take friction into account.

Maximum working load



WARNING!

The maximum working load (MWL) for the 50.2 ST Radial Winch is 1450 Kg (3196 lb). Subjecting the winch to loads above the maximum working load can cause the winch to fail or pull off the deck suddenly and unexpectedly during high loads causing severe injury or death.

Performance data

Winch 50.2 ST EL (electric)

	horizontal motor					
	12V (1500W)		24V (2000W)		48V (2000W)	
	1st speed	2nd speed	1st speed	2nd speed	1st speed	2nd speed
line speed (m/min)**	32,7	7,2	39,4	8,7	36,9	8,1
max load (Kg)	315	1450	315	1450	315	1450

	vertical motor					
	12V (1500W)		24V (2000W)		48V (2000W)	
	1st speed	2nd speed	1st speed	2nd speed	1st speed	2nd speed
line speed (m/min)**	37,4	8,2	45,1	9,9	41,6	9,2
max load (Kg)	315	1450	315	1450	315	1450

**Line speed is measured with no load

	motor nominal power (W)			current absorption at winch MWL (A)		
	12 V	24 V	48V	12V	24V	48V
horizontal	1500	2000	2000	230	140	73
vertical	1500	2000	2000	225	125	52

Winch 50.2 ST HY (hydraulic)

	1st speed	2nd speed
line speed (m/min)*	55,9	12,3
max load (Kg)**	315	1450

* at 20 l/min oil flow (5,28 Gal/min); ** at 130 bar at 20 l/min

NOTE

The ratio of the line load - pressure is evaluated at nominal flow rate.

The performance is evaluated measuring the pressure and flow on the motor ports.

The performance data are based on oil with a viscosity of 35mm²/s [165 SUS] and temperature of 50°C [120°F].

Weight

	ST A EH	ST C/CW EH	ST A EV	ST C/CW EV	ST A HY	ST C/CW HY
weight (Kg)	16,8	20,0	17,5	20,7	13,5	16,7
	ST BBB EH	ST CCC EH	ST BBB EV	ST CCC EV	ST BBB HY	ST CCC HY
weight (Kg)	21,2	21,2	21,9	21,9	17,9	17,9

Versions:


A = drum in anodised aluminium ; C = drum in chrome bronze; CW = chrome/white

BBB = all bronze; CCC = All-Chrome bronze


EH = horizontal electric winch; EV = vertical electric winch; HY = vertical hydraulic winch

Outline


Winch 50.2 ST EL/HY

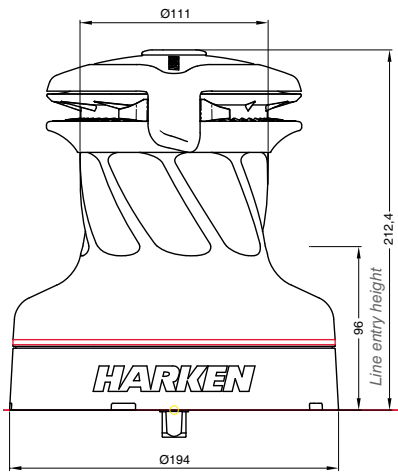


Horizontal electric motor (12V / 24V)

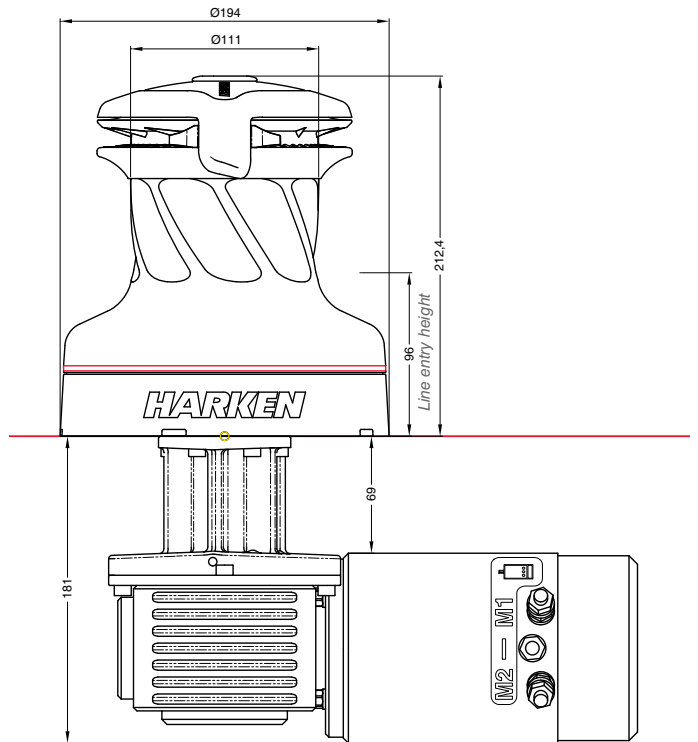

Vertical electric motor (12V / 24V / 48V)

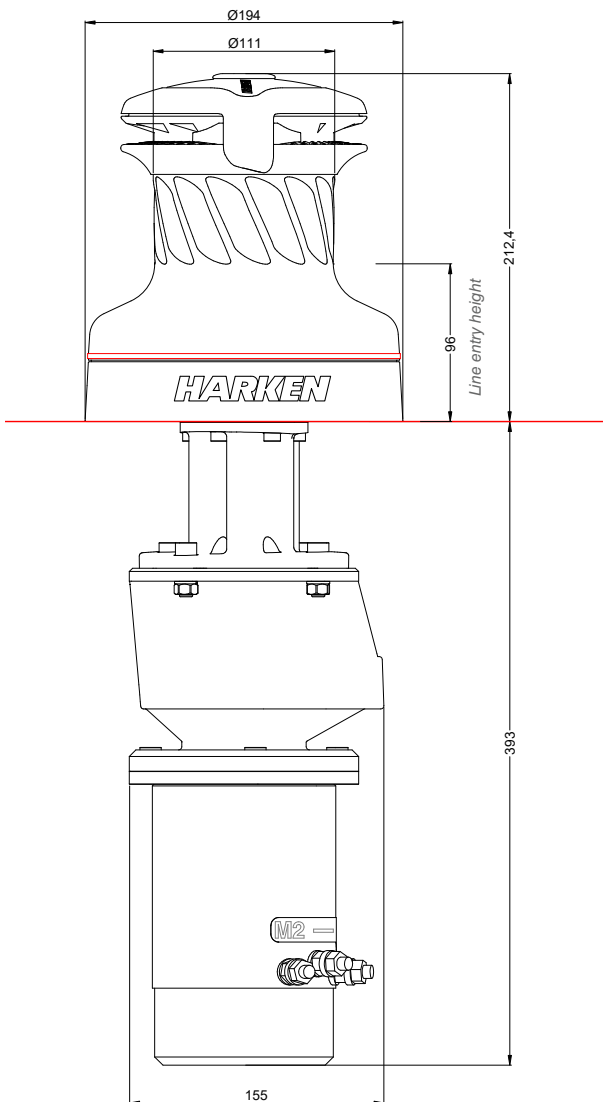

Hydraulic motor

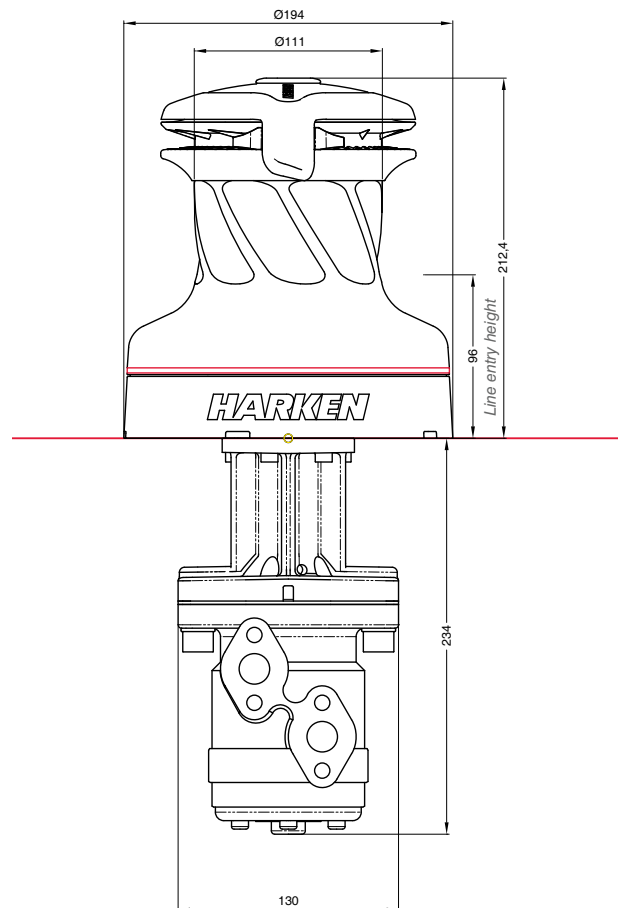

Installation

The winch must be installed on a flat area of the deck, reinforced if necessary to bear a load equal to at least twice the maximum working load of the winch.

It is the installer's responsibility to carry out all structural tests needed to ensure that the deck can bear the load.

Harken does not supply the screws needed to install the winch since these may vary depending on the deck on which it is to be installed.

It is the installer's responsibility to choose the correct screws taking account of the loads they will have to bear.

Harken assumes no responsibility for incorrect installation of its winches or for an incorrect choice of mounting screws.



DANGER!

Incorrect installation of the winch may cause severe injury or death. Consult the yard that built the boat in the case of doubt over the correct positioning of the winch.




WARNING!

Failure to use the correct number and type of mounting fasteners or failure to ensure the correct deck strength can result in the winch pulling off the deck suddenly and unexpectedly during high loads causing severe injury or death.




WARNING!

Verify the entry angle of the sheet. This must be 8° with tolerance of $\pm 2^\circ$, to avoid sheet overrides and damaging the winch or making the winch inoperable leading to loss of control of the boat which can lead to severe injury or death.

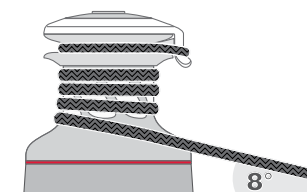

WARNING!

Mount the winch on the deck so that the drive gear is positioned where the sheet enters the winch drum. Incorrect position of drive gear can weaken winch leading to failure which can cause an accident leading to severe injury or death.

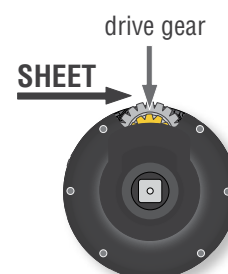

NOTICE

For winch STA, STC and STCW versions only
You can find the icon ▲ on the skirt to identify the drive gear position.




After correctly positioning the final drive gear with respect to the load, check that the motor, gearing, electrical wiring and/or hydraulic pipes can be housed below decks. To help find the optimal compromise, remember that, to make the installation of the motor easier, it can be coupled to the winch in different positions.

Once you have decided the correct mounting position for the winch on the deck and checked the space available below deck, proceed with the installation.


The winch can be installed following one of the two procedures below (Procedure 1 or Procedure 2):

Procedure 1

To install the winch, remove the drum and use Socket Head (SH) bolts.

Tools needed:  One medium flat-bladed screwdriver

To identify the various parts, refer to the exploded view at the end of this Manual.

 Torque to apply when assembling



1. Pull out the disconnect rod



2. Unscrew the central screw ($\approx 2\text{Nm}/18\text{ in-lb}$)



3. Slide off the assy socket and the cover.
Pay attention to the o-ring in the socket.



4. Unscrew the three screws
($\approx 4\text{Nm}/35\text{ in-lb}$)



5. Remove the self-tailing arm by rotating and lifting it.



6. Lift off the drum

Winch STA, STC and STCW versions:


Install the winch on the deck in the position you have chosen, keeping in mind the limits described on page 4 and using socket head (SH) bolts.

Winch STBBB and STCCC versions:

Install the winch on the deck in the position you have chosen, keeping in mind the limits described on page 4 and using socket head (SH) bolts or hexagonal headed bolts (HH).


Procedure 2 (not pertinent for ST BBB/CCC versions)


To install, remove the winch skirt and use hexagonal headed bolts.


Tools needed:  One medium flat-bladed screwdriver

To identify the various parts, refer to the exploded view at the end of this Manual.

See the limits described on page 6 and using socket head (SH) bolts.

 Torque to apply when assembling

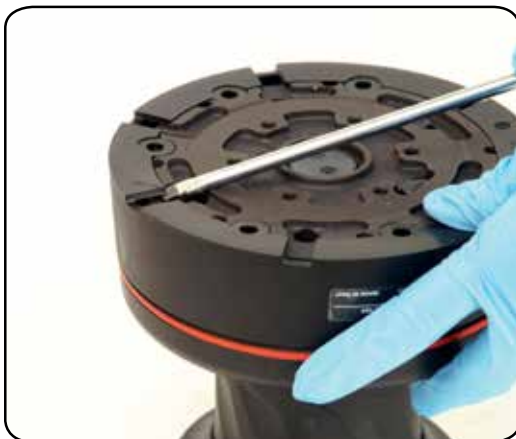

1. Remove the skirt with the help of the screwdriver placed as shown by the symbol 



2. Take off the base



3. Position the five M8 hexagonal headed bolts in their holes



4. Reposition the skirt in its housing



5. Press down the skirt to position it correctly

NOTICE

Make sure the skirt is correctly clipped on to the base of the winch.

Install the winch on the deck in the position you have chosen, keeping in mind the limits described on page 6 and using hexagonal headed (HH) bolts.

Winch installation procedure


Carry out Procedure 1 or Procedure 2, then install the winch on the deck in the chosen position.

NOTICE

Before drilling the deck, check the space available below deck for the flange and the motor

A. Position the base of the winch on the deck and mark the position of the holes or use the drilling cut-out template at the point where you have decided to place the winch.

Below is a reduced scale diagram.

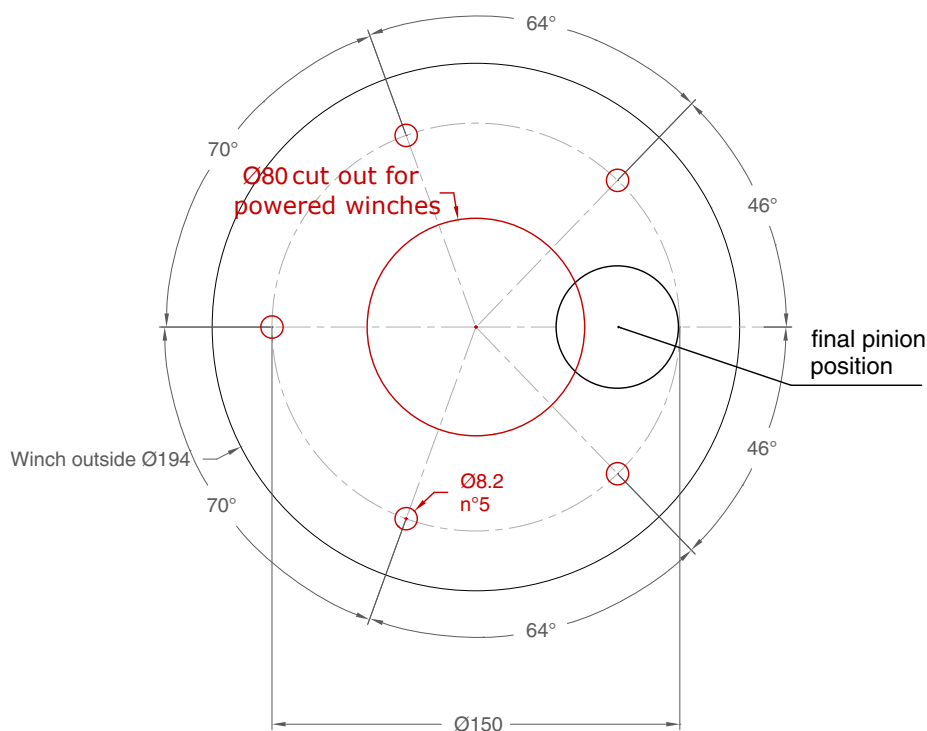

The drilling cut out template is available on the Harken website www.harken.com

B. Remove the winch and drill the five 8.2 mm and a 80 mm diameter holes.

C. Bolt the base of the winch to the deck using five M8 bolts (not supplied by Harken) as described at Procedure 1 or Procedure 2, correctly chosen for the thickness and type of the boat deck. Consult the yard that built the boat in case of doubt.



WARNING!

To install the winch on the deck, use only bolts in A4 stainless steel (DIN 267 part11). Bolts made of other materials may not have sufficient strength or may corrode which can result in winch pulling off deck suddenly and unexpectedly during high loads causing severe injury or death.

NOTICE

To mount winches on the deck, do not use countersunk bolts.

D. Fill the mounting holes with a suitable marine sealant.

E. Remove the excess adhesive/sealant from the holes and base drainage channels

F. Reassemble the winch following the steps in **Procedure 1** or **Procedure 2** in the reverse order, and apply the products indicated in the section on maintenance.

NOTICE

Before closing the winch, make sure the holes and drainage channels in the base of the winch are not obstructed.

Positioning the self-tailing arm

Position the self-tailing arm so that the line leaving the winch is led into the cockpit.

Motor installation procedure**WARNING!**

Make sure that the power is switched off before installing or carrying out maintenance on the winch.

**WARNING!**

The entire gearmotor assembly is IP54 graded: install the gearmotor under the deck, in a dry place and protected from the external environment, in a position where it is possible to check its status.

Once you have installed the winch on the deck, proceed with motor installation. The motor can be coupled to the winch in different positions. Check the space available below deck and choose the suitable position.

Tools needed

A number five hex key

A number six hex key (only for vertical electric motor)



A number ten hex key (only for hydraulic motor)

Two number thirteen wrenches



1. Position the flange



2. Tighten six M6 precote coated screws
(8 Nm/ 71 in-lb)



3. Position the reduction gear and motor



4. Tighten the two screws (8 Nm/ 71 in-lb).
Be sure to align the flange.

NOTICE

Before positioning the flange, check to make sure that seals (the first one is above the flange and the second one is under the flange) are seated correctly.



After winch is assembled and before sailing, test the powered winch functioning: insert the lock-in winch handle in the handle socket and check that the disconnect rod must disconnect gearbox.

Electric equipment

To guarantee greater efficiency in terms of safety and long life, for every winch model is mandatory to install the Dual Function Control Box.

To fasten the Dual Function Control Box containing solenoids to bulkhead or wall, for all installation details and for all electric wiring schemes, refer to the Dual Function Control Box manual.



WARNING!

Before installing and using the device, read carefully the Dual Function Control Box manual available on web site www.harken.com

Refer to the following chart for wire size:

Total distance between winch and battery

Winch size	Current voltage	Under 16.4 ft AWG	Under 5 m mm ²	16.4 - 32.8 ft AWG	5 m - 10 m mm ²	32.8 - 49.2 ft AWG	10 m - 15 m mm ²	49.2 - 65.6 ft AGW	15m - 20 m mm ²
50.2	12 V	2	32	0	50	00	70	000	95
50.2	24 V	5	16	3	25	2	35	0	50
50.2	48 V	8	8	6	14	4	18	3	25

Refer to the following chart for HCP model:

Winch size	Current voltage	HCP model	Ampere rating
50.2	12 V	HCP1720	135A
50.2	24 V	HCP1717	80A
50.2	48 V	HCP1717	80A

NOTICE

To connect motor, attach cable terminals to clamps between nut and lock nut. Hold nut in contact with motor using a spanner and tighten other nut with second spanner. Take special care not to turn the central spindles. These instructions apply when assembling and disassembling. We recommend using a torque wrench so as to obtain a torque equal to and no greater than 10 Nm (88 in-lb).



NOTICE

Note that correct electrical contact sequence is:
Nut – Cable Terminal – Self-Locking Washer – Lock Nut



Hydraulic connections diagram


The hydraulic motor must be connected to a hydraulic system using two high-pressure tubes which serve for input or output according to the direction in which the motor will be run. The motor also needs a third connection with a low pressure tube for drainage, so that excess oil can return to the main tank to avoid shortening the life of the motor. This motor uses an open centre valve.

Refer to the following chart for the hydraulic system:

For the hydraulic motor:

Input/output pipe thread: G 1/2 – depth 15 mm

Drainage pipe thread: G 1/4 – depth 12 mm

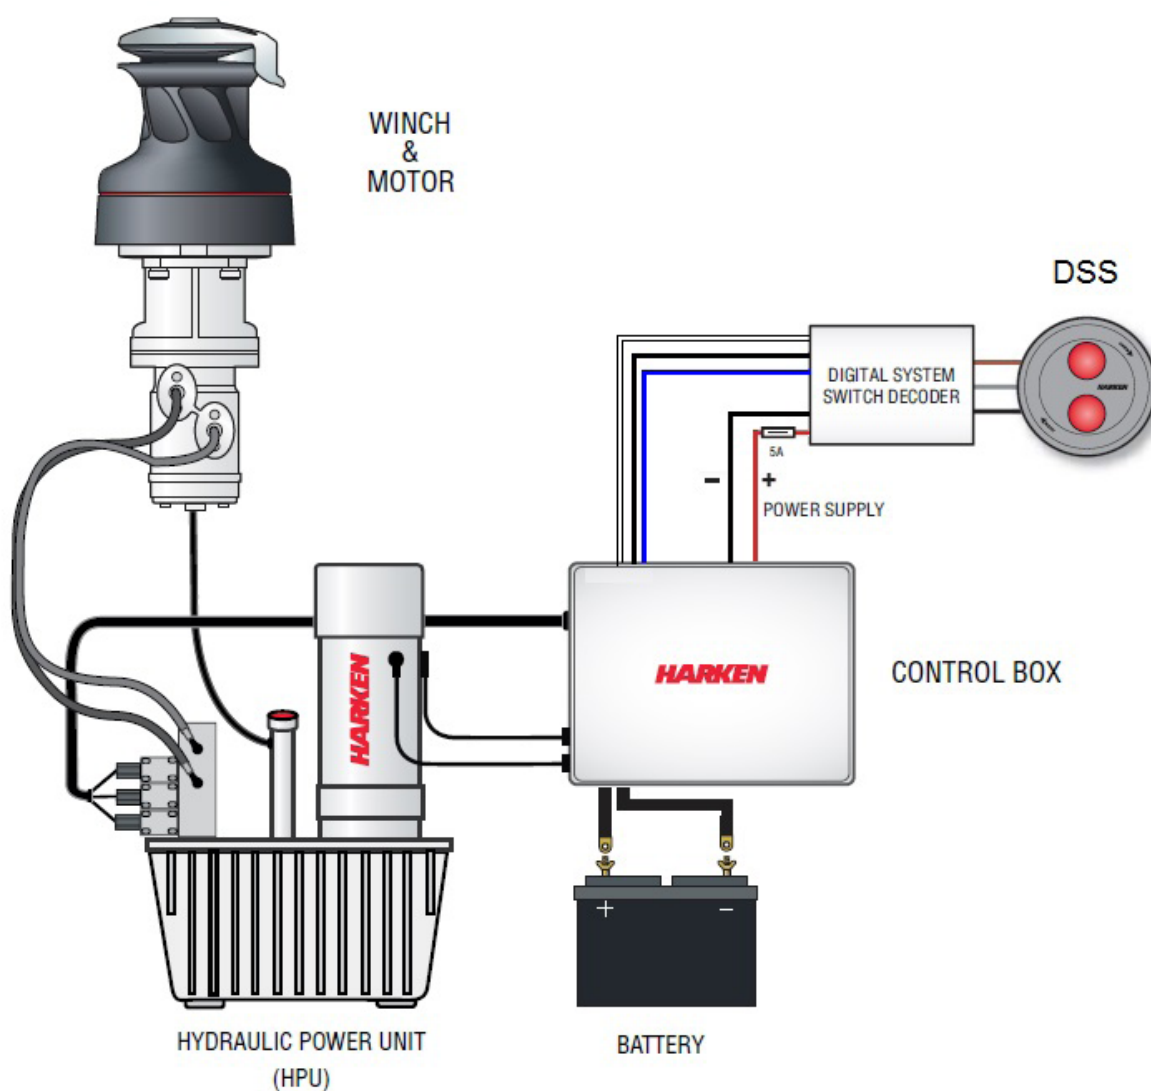

WARNING!

Refer to the Hydraulic Power Unit and Control Box manual.



WARNING!

Refer to the Digital System Switch manual.

Maintenance

Washing

Winches must be washed frequently with fresh water, and in any case after each use.

Do not allow teak cleaning products or other cleaners containing caustic solutions to come into contact with winches and especially anodised, chrome plated or plastic parts.

Do not use solvents, polishes or abrasive pastes on the logos or stickers on the winches. Do not use polishes or abrasive pastes on anodised, chromed plated or plastics surfaces.

Make sure that the holes and drainage channels in the base of the winch are not obstructed so that water does not collect.

Maintenance table

Winches must be visually inspected at the beginning and end of every season of sailing or racing. In addition they must be completely overhauled, cleaned and lubricated at least every 12 months. After an inspection, replace worn or damaged components. Do not replace or modify any part of the winch with a part that is not original.



WARNING!

Periodic maintenance must be carried out regularly. Lack of adequate maintenance shortens the life of the winch, can cause serious injury and also invalidate the winch warranty. Installation and maintenance of winches must be carried out exclusively by specialized personnel.







WARNING!

Make sure that the power is switched off before installing or carrying out maintenance on the winch.

In the case of doubt contact Harken Tech Service at techservice@harken.it

Disassembly procedure

Tools needed:

-  One medium flat-bladed screwdriver
-  A number six hex key
-  Brush
-  Rags

To identify the various parts refer to the exploded view at the end of this Manual.

 Torque to be applied in assembly phase

Carry out **Procedure 1** as shown in the paragraph on winch installation and then do the following:



6. Completely unscrew the three screws and remove the stripper arm support



7. Slide out the central shaft



8. Unscrew the five hex screws
($\approx 20\text{Nm}/177\text{ in-lb}$)



9. Remove the assy housing
Important: washer may remain inside the drum support!



10. Remove the gear



11. Remove the washer



12. Remove the gear



13. Remove the pawls carrier



14. Remove the gear



15. Remove the pinion.

To facilitate the operation press the spring against the pawl with a blade



16. Slide off gear

If it is necessary to replace any jaws of the winch, proceed as follows:



I. Unscrew the 4 screws
($\approx 4\text{Nm}/35\text{ in-lb}$)



II. Remove the jaws

Once the winch is completely disassembled, clean the parts with a degreasing that does not leave residues, proper to clean metal components; rinse plastic parts in fresh water. Once you have done this, dry the parts with cloths that do not leave residue.

Inspect gears, bearings, pins and pawls for any signs of wear or corrosion.

Carefully check the teeth of gears and ring gears to make sure there are no traces of wear.

Check the roller bearings and check there are no breaks in the bearing cages.

Replace worn or damaged components.


Carry out maintenance on components using the products listed below.

For more information on which products to use where, refer to the exploded diagram below.

Use a brush to lightly lubricate all gears, gear pins, teeth and all moving parts with grease.

Lightly lubricate the pawls and springs with oil. Do not use grease on the pawls!

Exploded view with maintenance products

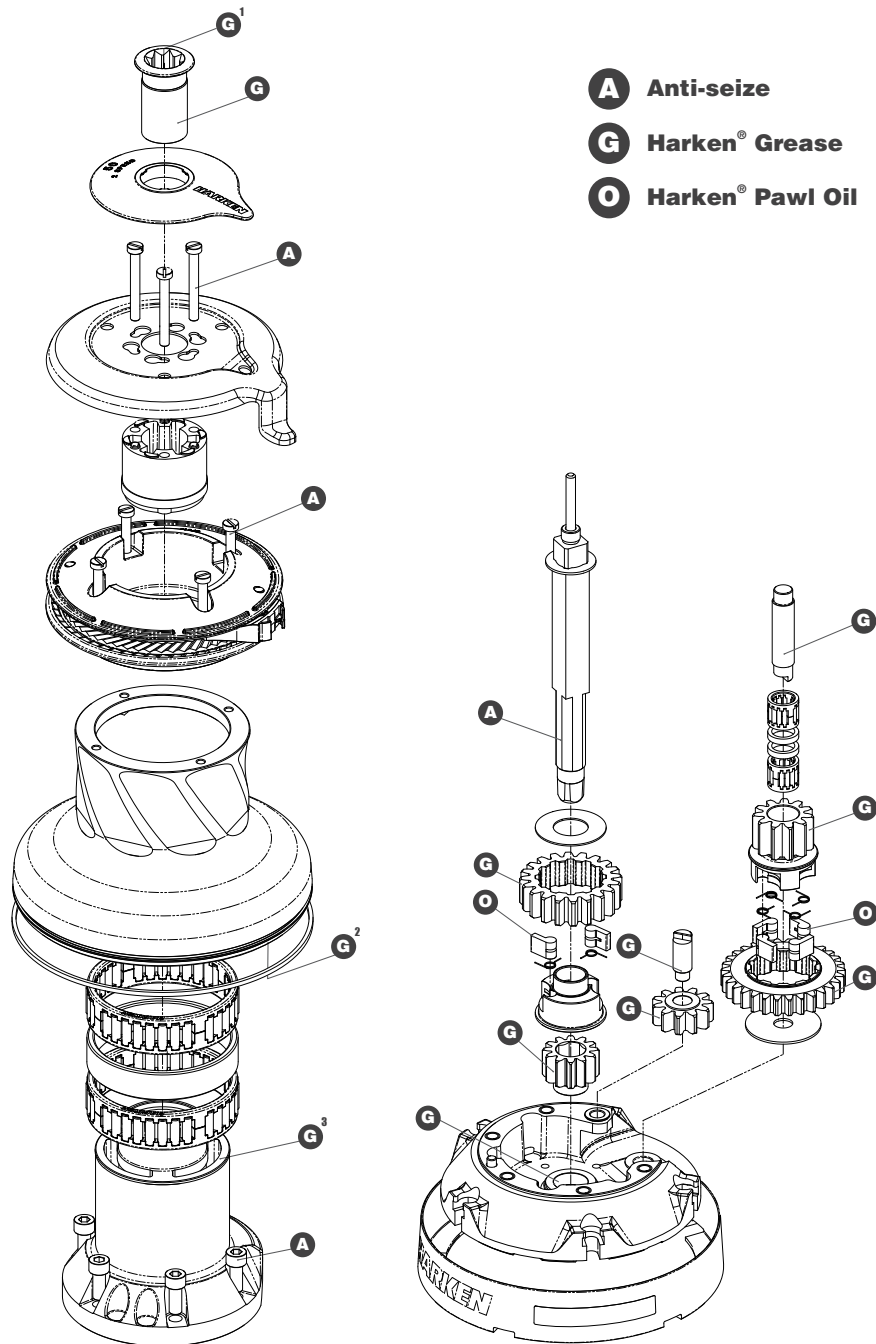

Apply Harken® grease where indicated above
 Apply Harken® grease: 1. on assy socket screw - 2. on drum gear

NOTICE

On every gear and every component that must be greased, apply Harken® grease with a brush in a proper quantity as shown below:



NOTICE

Harken® grease to apply on all teeth: do not use excessive quantity of product to void wastes. If in contact with the pawls, an excess of grease can compromise the safety of the winch.

Assembly

Make sure that the holes and drainage channels in the base of the winch are not obstructed. Assemble the winch in the reverse order of the sequence in the section on disassembly.


To tighten bolts, use the torque indicated in the disassembly procedure.



When positioning the stripper arm, align the peeler with it.




If the jaws have been disassembled, insert peeler between the two jaws, taking care that the letters TOP on the peeler are facing upwards.

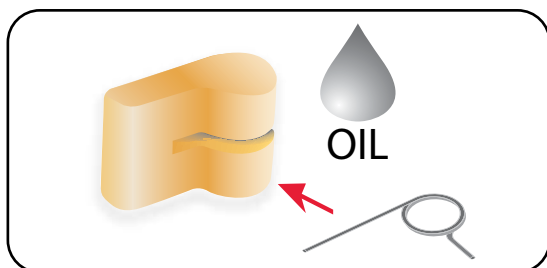

To assemble the pawls

Correctly position the spring in its housing as shown at left. Hold the spring closed and slide the pawl into its housing. Once in position, check that the pawls can be easily opened and closed with a finger.

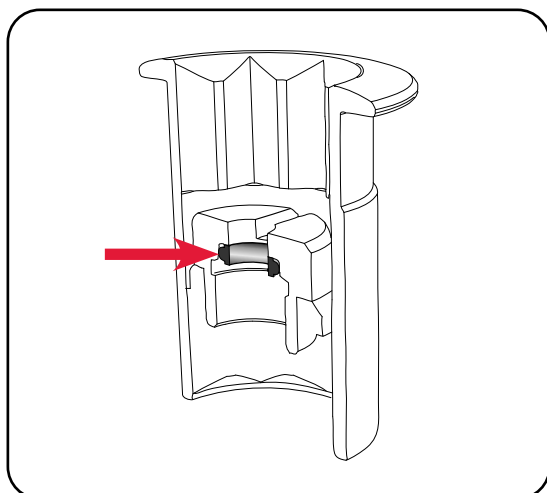

NOTICE

Before screw the central screw, check the correct position of the o-ring in the assy socket and apply Harken® grease.

In case of doubt concerning the assembly procedure contact Harken Tech Service: techservice@harken.it

Harken® limited worldwide warranty

Refer to the Harken® Limited Worldwide Warranty in the Harken Catalogue and on the website www.harken.com

Ordering spare parts

Spare parts can be requested from Harken as described in the Harken® Limited Worldwide Warranty, indicating the part number in the Parts List and including the serial number of the winch for which the parts are required.

The serial number of the winch is printed on a plate on the drum support of the winch.



Manufacturer

Harken® Italy S.p.A.

Via Marco Biagi, 14
22070 Limido Comasco (CO) Italy
Tel: (+39) 031.3523511
Fax: (+39) 031.3520031
Email: info@harken.it
Web: www.harken.com

● **Tech Service**
Email: techservice@harken.it

● **Customer Service**
Tel: (+39) 031.3523511
Email: info@harken.it


Headquarters


Harken®, Inc.

1251 East Wisconsin Avenue
Pewaukee, Wisconsin 53072-3755 USA
Tel: (262) 691.3320
Fax: (262) 691.3008
Email: harken@harken.com
Web: www.harken.com

● **Tech Service**
Email: technicalservice@harken.com

● **Customer Service**
Tel: (262) 691-3320
Email: customerservice@harken.com

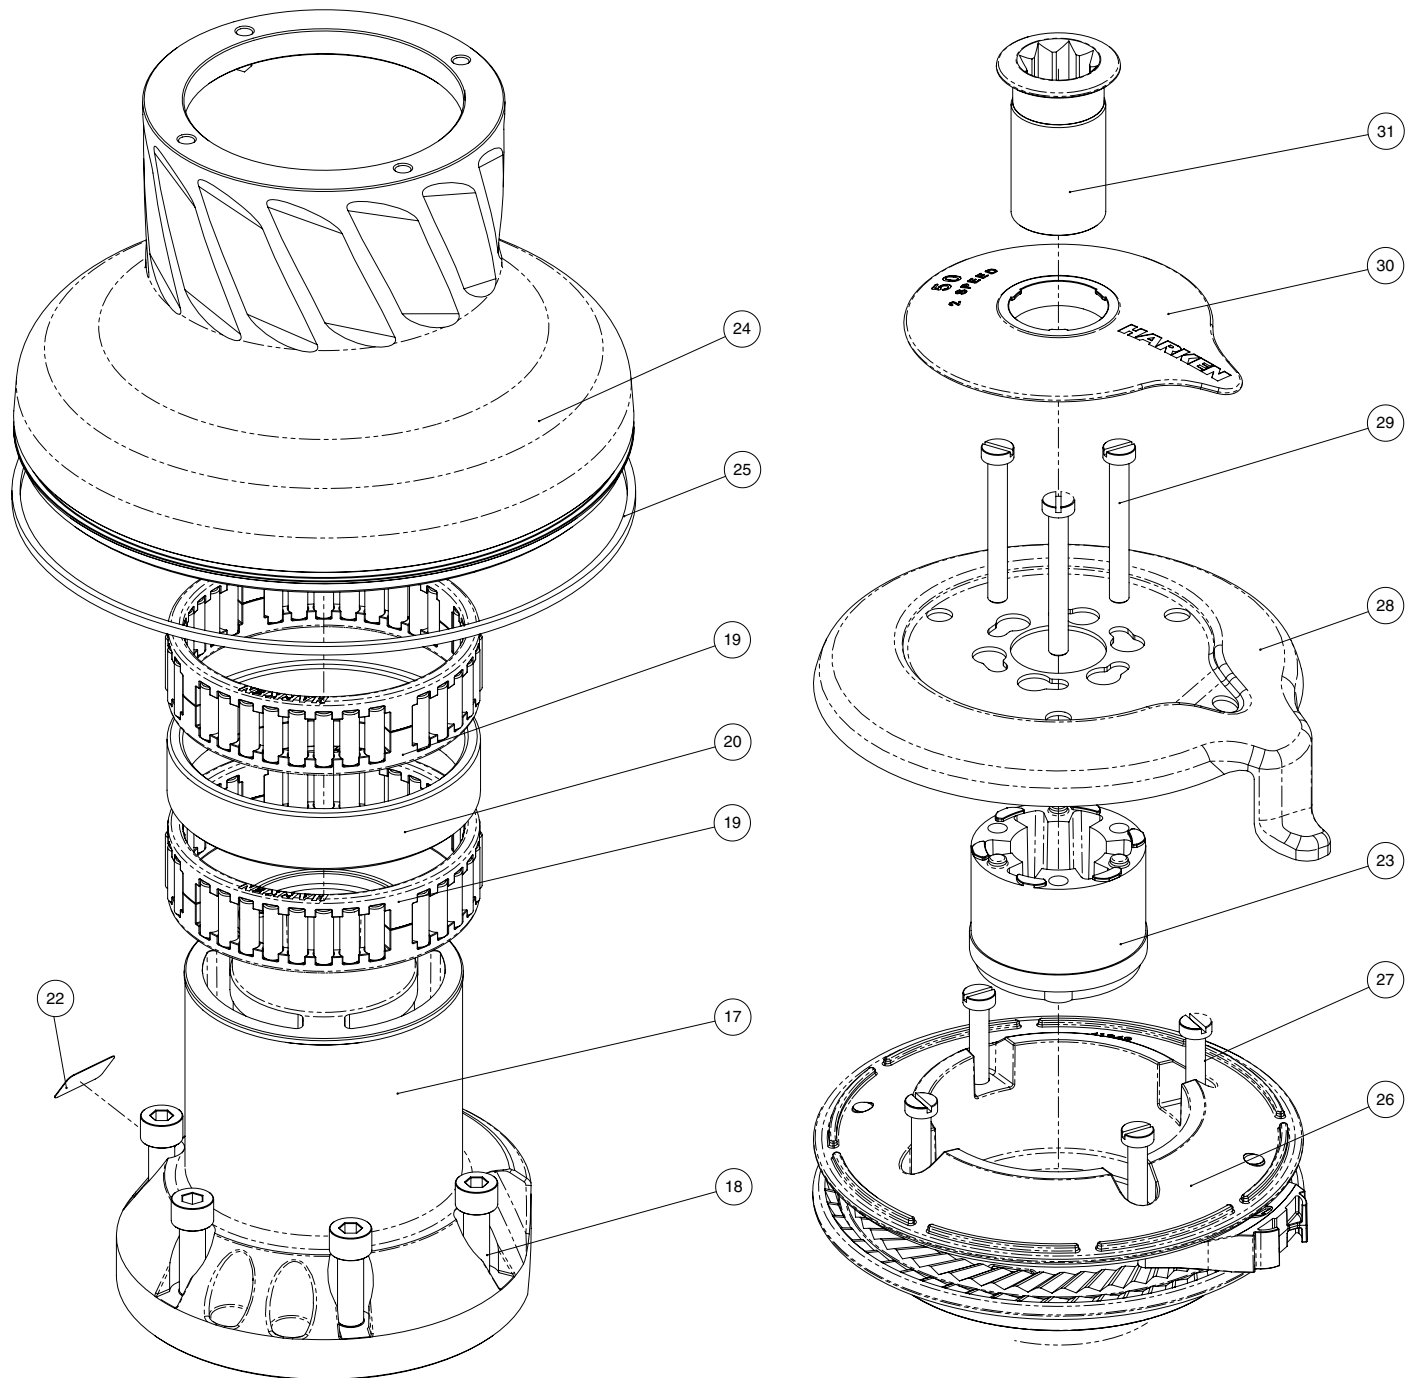Exploded view*Radial Winch 50.2 STA, STC, STCW EL/HY*

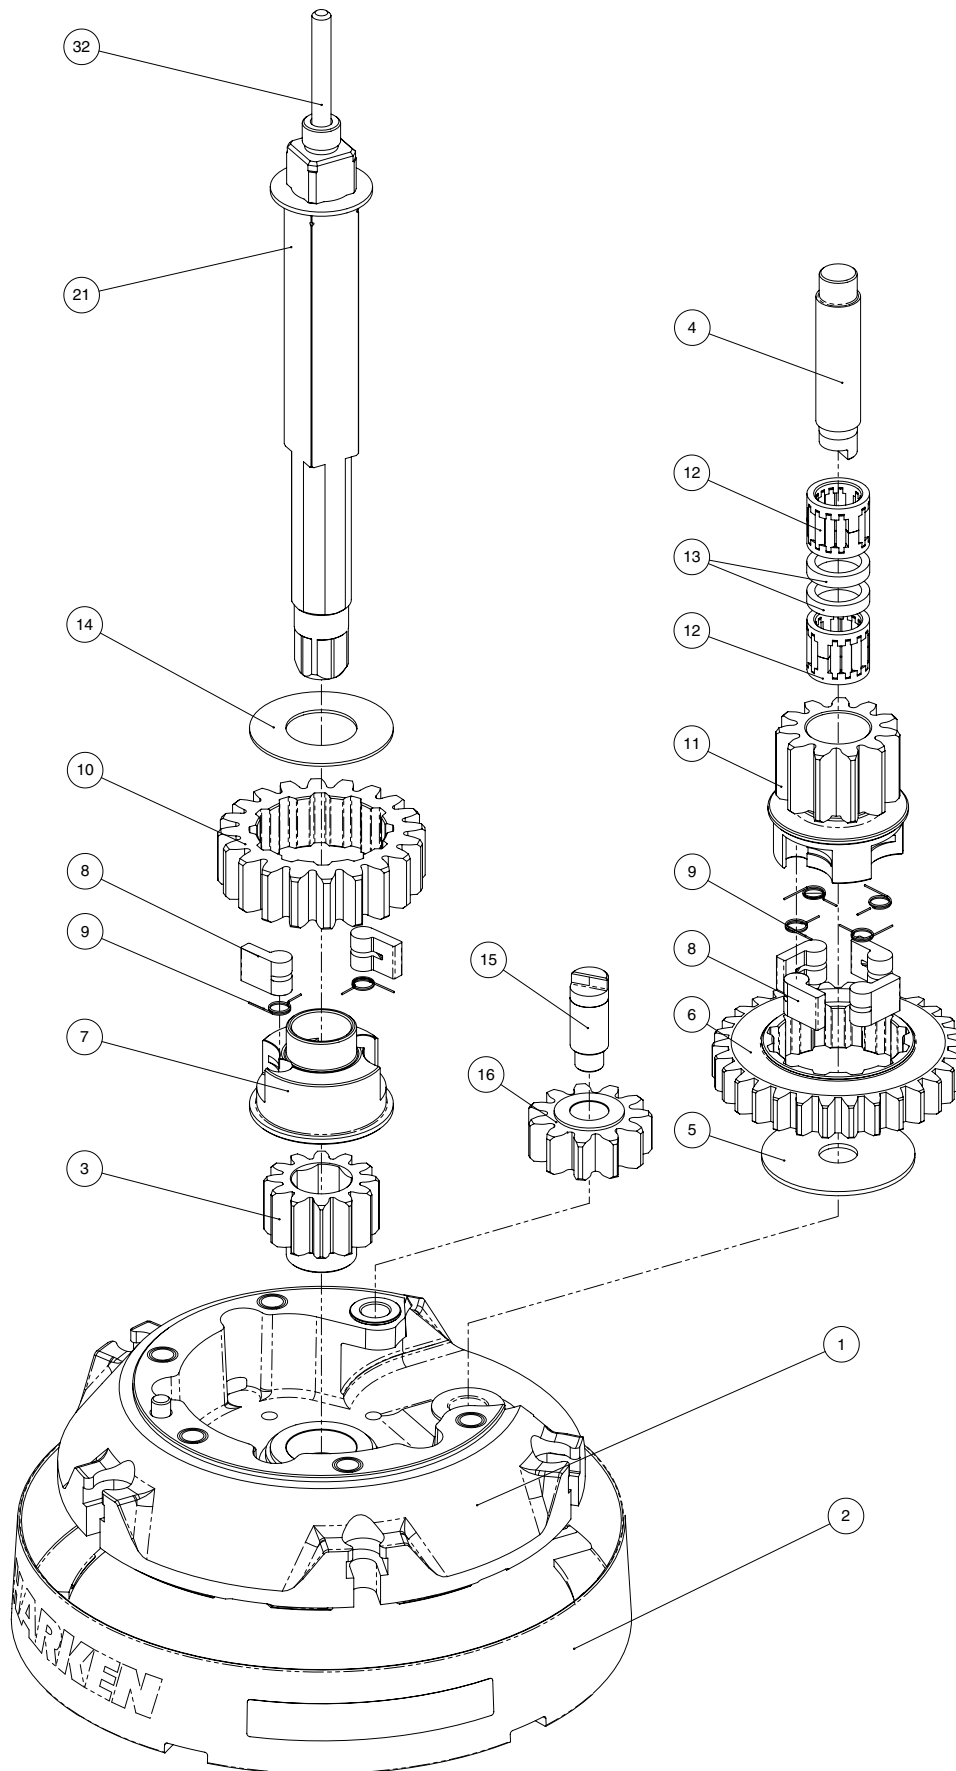Radial Winch 50.2 STA, STC, STCW EL/HY

Parts List

Radial Winch 50.2 STA EL/HY

A = drum in anodised aluminium

Pos.	Q.ty	Code	Description	Pos.	Q.ty	Code	Description
1	1	A94189800	Assy Base Winch 50 EL/HY	19	2	A74135100	Bearing Ø85xØ97x26
	1	S413350080	Base W50	20	1	S413520080	Spacer
	1	S4130900A7	Roller Ø6x19	21	1	A96753100	Assy Central Shaft Winch 50
	1	S414890080	Bushing Ø22xØ25x8.5		1	S413880002	Central Shaft Pred. W50
	1	S413330085	Bushing Ø9xØ11x7				Washer Ø17.2xØ32x1.5
	1	S413330085	Bushing Ø12xØ14x11	22			Winch Serial Number Sticker
2	1	A94134900	Assy Skirt Winch 50	23	1	S4129400A0	Stripper arm support
			Skirt W50	24	1	S413400053	Drum W50
			Winch Product Sticker**	25	1	S281690097	Red line
3	1	S413020004	Gear Z12	26	1	A94134300	Assy Jaws Winch 50
4	1	S416050004	Pin				Lower Jaw W50
5	1	S278170002	Washer Ø12.5xØ48x1.5				Upper Jaw W50
6	1	S412800041	Gear Z30		1	S414280080	Peeler W46 - 50
7	1	S414260004	Pawls Carrier Ø8xN2		4	S385970001	SPRING
8	6	S000080003	Pawl Ø8*	27	4	M0601803	Screw UNI EN ISO 1207 - M6x35 - A4
9	6	S000380001	Pawl Spring Ø8*	28	1	S413440019	Stripper Arm W50
10	1	S415590041	Gear Z20	29	3	M6007103	Screw M6x50 UNI6107
11	1	S415610004	Pinion Z11	30	1	S4134500A5	Cover 2 speed W50
12	2	A72821800	Roller Bearing Ø14xØ20x18	31	1	A94149300	Assy Socket W35-80 EL/HY
13	2	S281340080	Spacer roller bearings				Socket Handle W20/80
14	1	S413120002	Washer Ø22.5xØ45x1		1	S414940085	Washer Ø25xØ15x4
15	1	S413070004	Pin Ø9xØ12x32.5		1	S414930003	Nut Screw for Disconnect Rod
16	1	A94156000	Assy Gear Z11		1	M0679797	O ring RC 2025 series
			Gear Z11	32	1	S415070002	Disconnect Rod W50
	2	S414900080	Bushing Ø12xØ14x8				
17	1	A94134800	Assy Housing Winch 50				
			Housing Winch 50				
	1	S414900080	Bushing Ø12xØ14x8				
	1	S413330085	Bushing Ø12xØ14x11				
	1	S4133200B3	Bushing for support				
18	5	M0606303	Screw M8x25 UNI 5931				

*Available with service kit; see website www.harken.com

**Winch product sticker



Radial Winch 50.2 STC EL/HY

C = drum in chrome bronze

Pos.	Q.ty	Code	Description	Pos.	Q.ty	Code	Description
1	1	A94189800	Assy Base Winch 50 EL/HY <i>Base W50</i>	19	2	A74135100	Bearing Ø85xØ97x26
	1	S413350080	<i>Roller Ø6x19</i>	20	1	S413520080	Spacer
	1	S4130900A7	<i>Bushing Ø22xØ25x8.5</i>	21	1	A96753100	Assy Central Shaft Winch 50 <i>Central Shaft Pred. W50</i>
	1	S414890080	<i>Bushing Ø9xØ11x7</i>		1	S413880002	<i>Washer Ø17.2xØ32x1.5</i>
	1	S413330085	<i>Bushing Ø12xØ14x11</i>	22			Winch Serial Number Sticker
2	1	A94134900	Assy Skirt Winch 50 <i>Skirt W50</i> <i>Winch Product Sticker**</i>	23	1	S4129400A0	Stripper arm support
3	1	S413020004	Gear Z12	24	1	S413410043	Drum W50 C
4	1	S416050004	Pin	25	1	S281690097	Red line
5	1	S278170002	Washer Ø12.5xØ48x1.5	26	1	A94134300	Assy Jaws Winch 50 <i>Lower Jaw W50</i> <i>Upper Jaw W50</i> <i>Peeler W46 - 50</i> <i>SPRING</i>
6	1	S412800041	Gear Z30		1	S414280080	
7	1	S414260004	Pawls Carrier Ø8xN2		4	S385970001	
8	6	S000080003	Pawl Ø8*	27	4	M0601803	Screw UNI EN ISO 1207 - M6x35 - A4
9	6	S000380001	Pawl Spring Ø8*	28	1	S413440019	Stripper Arm W50
10	1	S415590041	Gear Z20	29	3	M6007103	Screw M6x50 UNI6107
11	1	S415610004	Pinion Z11	30	1	S4134500A5	Cover 2 speed W50
12	2	A72821800	Roller Bearing Ø14xØ20x18	31	1	A94149300	Assy Socket W35-80 EL/HY <i>Socket Handle W20/80</i> <i>Washer Ø25xØ15x4</i> <i>Nut Screw for Disconnect Rod</i> <i>O ring RC 2025 series</i>
13	2	S281340080	Spacer roller bearings		1	S414940085	
14	1	S413120002	Washer Ø22.5xØ45x1		1	S414930003	
15	1	S413070004	Pin Ø9xØ12x32.5		1	M0679797	
16	1	A94156000	Assy Gear Z11 <i>Gear Z11</i> <i>Bushing Ø12xØ14x8</i>	32	1	S415070002	Disconnect Rod W50
	2	S414900080					
17	1	A94134800	Assy Housing Winch 50 <i>Housing Winch 50</i> <i>Bushing Ø12xØ14x8</i> <i>Bushing Ø12xØ14x11</i> <i>Bushing for support</i>				
	1	S414900080					
	1	S413330085					
	1	S4133200B3					
18	5	M0606303	Screw M8x25 UNI 5931				

*Available with service kit; see website www.harken.com

**Winch product sticker



Radial Winch 50.2 STCW EL/HY


CW = chrome/white


Pos.	Q.ty	Code	Description	Pos.	Q.ty	Code	Description
1	1	A94189800	Assy Base Winch 50 EL/HY <i>Base W50</i>	19	2	A74135100	Bearing Ø85xØ97x26
	1	S413350080	<i>Roller Ø6x19</i>	20	1	S413520080	Spacer
	1	S 41309 00 A7	<i>Bushing Ø22xØ25x8.5</i>	21	1	A96753100	Assy Central Shaft Winch 50 <i>Central Shaft Pred. W50</i>
	1	S414890080	<i>Bushing Ø9xØ11x7</i>		1	S413880002	<i>Washer Ø17.2xØ32x1.5</i>
	1	S 41333 00 85	<i>Bushing Ø12xØ14x11</i>	22			Winch Serial Number Sticker
2	1	A94134900W	Assy Skirt Winch 50 RAL9003 <i>Skirt W50 RAL9003</i> <i>Winch Product Sticker**</i>	23	1	S4129400A0	Stripper arm support
3	1	S413020004	Gear Z12	24	1	S413410043	Drum C W50
4	1	S416050004	Pin	25	1	S281690097	Red line
5	1	S278170002	Washer Ø12.5xØ48x1.5	26	1	A94134300W	Assy Jaws Winch 50 <i>Lower Jaw W50 RAL9003</i> <i>Upper Jaw W50 RAL9003</i> <i>Peeler W46 - 50 RAL9003</i> <i>SPRING</i>
6	1	S412800041	Gear Z30		1	S414280080W	
7	1	S414260004	Pawls Carrier Ø8xN2		4	S385970001	
8	6	S000080003	Pawl Ø8*	27	4	M0601803	Screw UNI EN ISO 1207 - M6x35 - A4
9	6	S000380001	Pawl Spring Ø8*	28	1	S413440019	Stripper Arm W50
10	1	S415590041	Gear Z20	29	3	M6007103	Screw M6x50 UNI6107
11	1	S415610004	Pinion Z11	30	1	S4134500A5W	Cover 2 speed W50 RAL9003
12	2	A72821800	Roller Bearing Ø14xØ20x18	31	1	A94149300	Assy Socket W35-80 EL/HY <i>Socket Handle W20/80</i> <i>Washer Ø25xØ15x4</i> <i>Nut Screw for Disconnect Rod</i> <i>O ring RC 2025 series</i>
13	2	S281340080	Spacer roller bearings		1	S414940085	
14	1	S413120002	Washer Ø22.5xØ45x1		1	S414930003	
15	1	S413070004	Pin Ø9xØ12x32.5		1	M0679797	
16	1	A94156000	Assy Gear Z11 <i>Gear Z11</i> <i>Bushing Ø12xØ14x8</i>	32	1	S415070002	Disconnect Rod W50
	2	S414900080					
17	1	A94134800	Assy Housing Winch 50 <i>Housing Winch 50</i> <i>Bushing Ø12xØ14x8</i> <i>Bushing Ø12xØ14x11</i> <i>Bushing for support</i>				
	1	S414900080					
	1	S413330085					
	1	S4133200B3					
18	5	M0606303	Screw M8x25 UNI 5931				

*Available with service kit; see website www.harken.com

**Winch product sticker

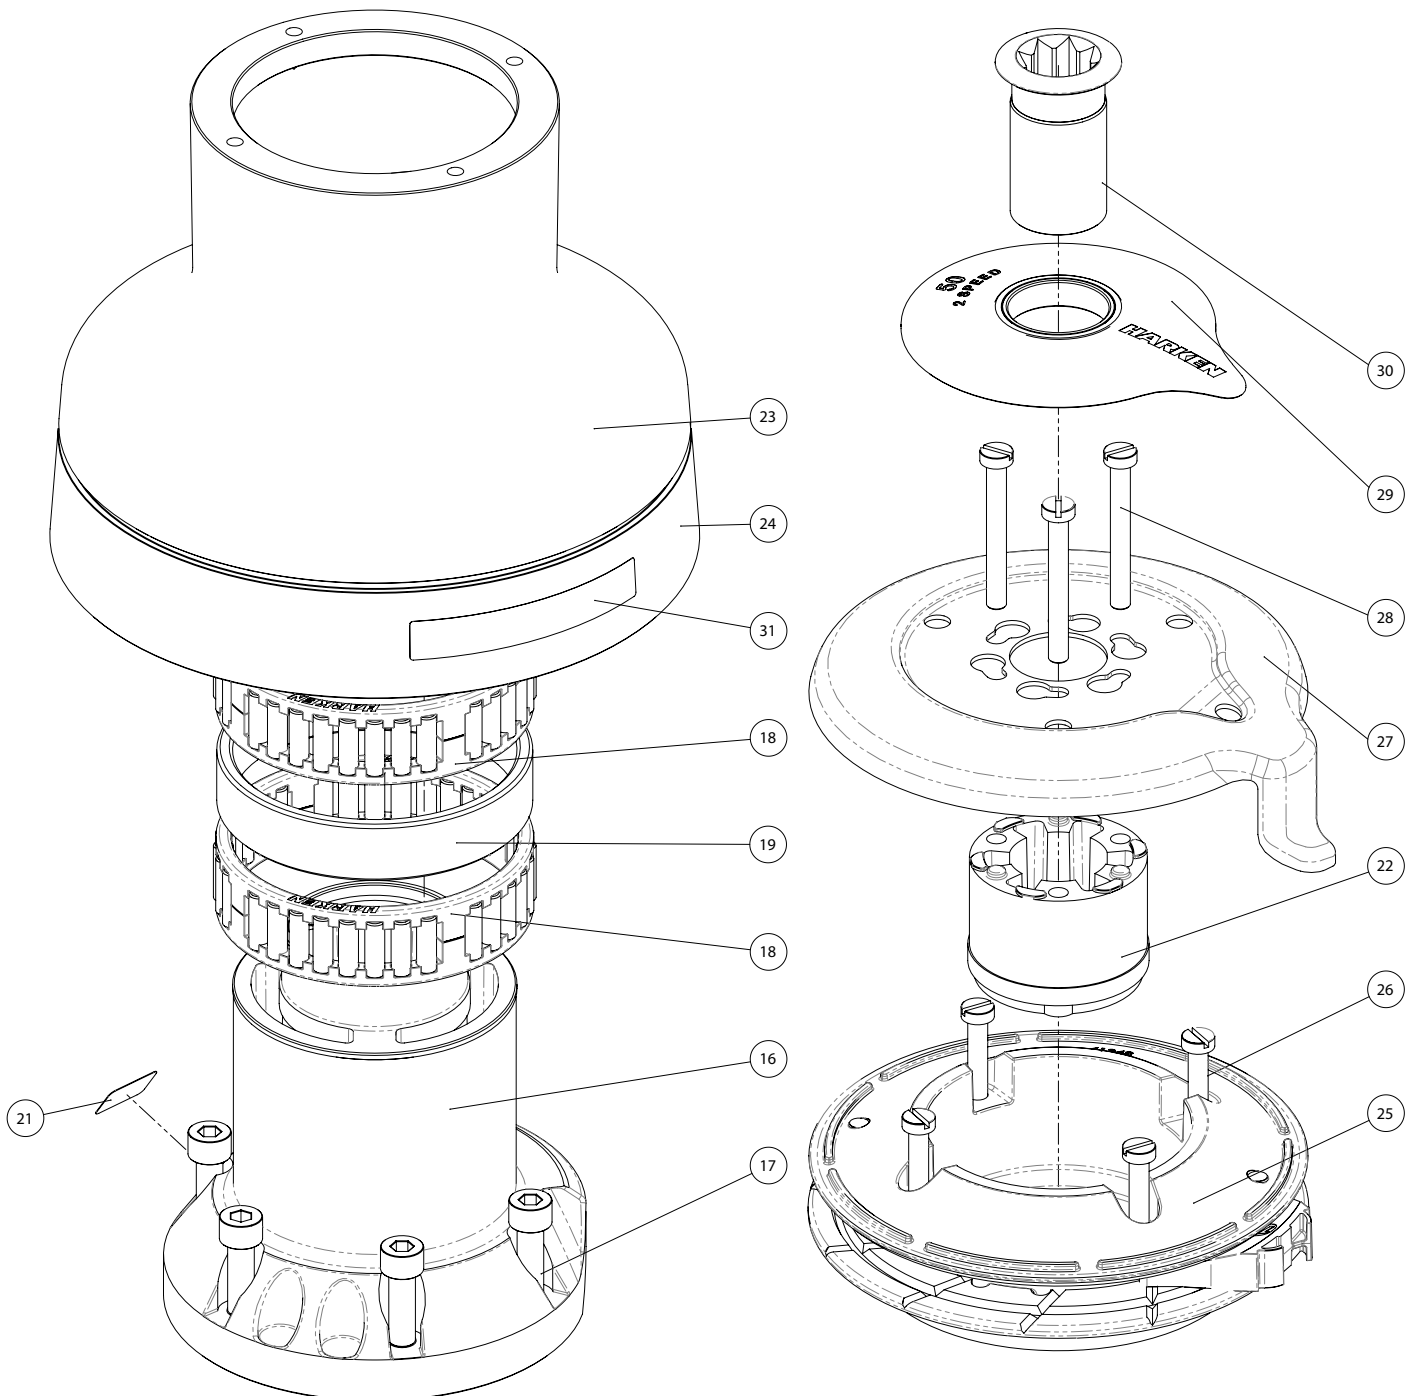

Radial Winch 50.2 STBBB, STCCC EL/HY

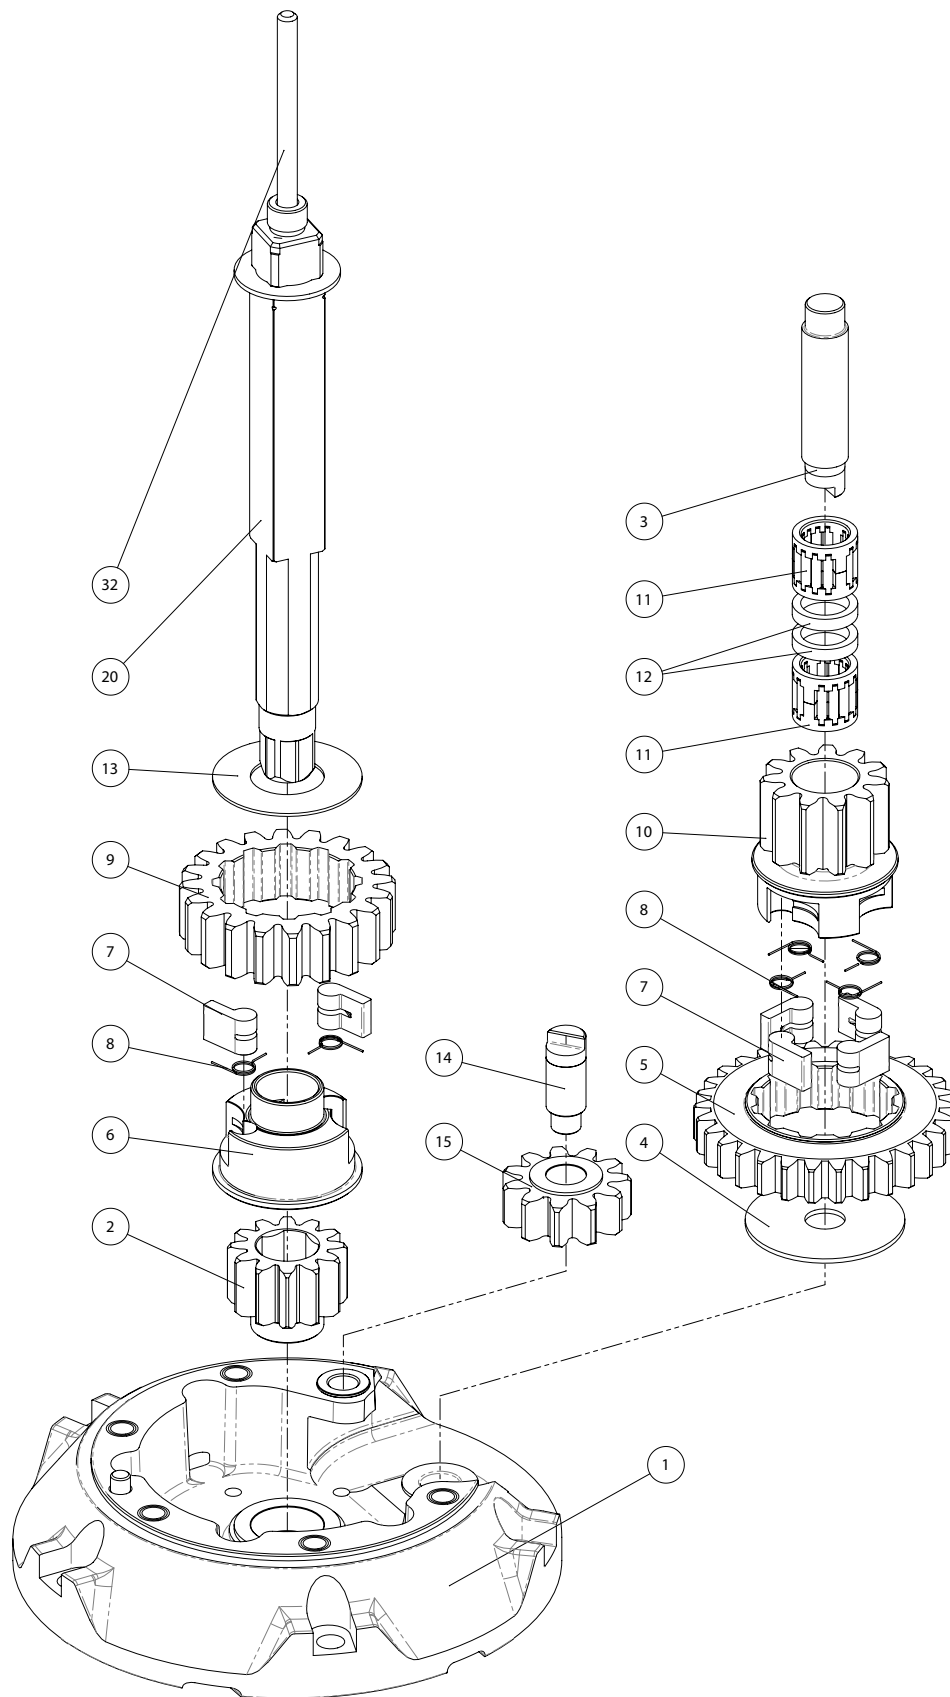Radial Winch 50.2 STBBB, STCCC EL/HY

Radial Winch 50.2 STBBB EL/HY

BBB = all bronze

Pos.	Q.ty	Code	Description	Pos.	Q.ty	Code	Description
1	1	A96634000	Assy base Winch 50 EL/HY <i>Base W50</i>	19	1	S413520080	Spacer
	1	S413350080	<i>Roller Ø6x19</i>	20	1	A96753100	Assy Central Shaft Winch 50 <i>Central Shaft Pred. W50</i>
	1	S4130900A7	<i>Bushing Ø22xØ25x8.5</i>		1	S413880002	<i>Washer Ø17.2xØ32x1.5</i>
	1	S414890080	<i>Bushing Ø9xØ11x7</i>	21			Winch Serial Number Sticker
	1	S413330085	<i>Bushing Ø12xØ14x11</i>	22	1	S4129400A0	Stripper arm support
2	1	S413020004	Gear Z12	23	1	S688140043	Drum W50 B
3	1	S416050004	Pin	24	1	S281690097	Red line
4	1	S278170002	Washer Ø12.5xØ48x1.5	25	1	A96933500	Assy Jaws Winch 50 BBB <i>Lower Jaw W50 BBB</i>
5	1	S412800041	Gear Z30				<i>Upper Jaw W50</i>
6	1	S414260004	Pawls Carrier Ø8xN2		1	S414280080	<i>Peeler W46 - 50</i>
7	6	S000080003	Pawl Ø8*		4	S385970001	<i>Spring</i>
8	6	S000380001	Pawl Spring Ø8*	26	4	M0601803	Screw UNI EN ISO 1207 - M6x35 - A4
9	1	S415590041	Gear Z20	27	1	S7123200F0	Stripper arm W50 BBB
10	1	S415610004	Pinion Z11	28	3	M6007103	Screw M6x50 UNI6107
11	2	A72821800	Roller Bearing Ø14xØ20x18	29	1	A76933600	Cover W50 ST BBB
12	2	S281340080	Spacer roller bearings	30	1	A94149300	Assy Socket W35-80 EL/HY <i>Socket Handle W20/80</i>
13	1	S413120002	Washer Ø22.5xØ45x1		1	S414940085	<i>Washer Ø25xØ15x4</i>
14	1	S413070004	Pin Ø9xØ12x32.5		1	S414930003	<i>Nut Screw for Disconnect Rod</i>
15	1	A94156000	Assy Gear Z11 <i>Gear Z11</i>		1	M0679797	<i>O ring RC 2025 series</i>
	2	S414900080	<i>Bushing Ø12xØ14x8</i>	31			Winch Product Sticker**
16	1	A94134800	Assy housing Winch 50 <i>Housing Winch 50</i>	32	1	S415070002	Disconnect Rod W50
	1	S414900080	<i>Bushing Ø12xØ14x8</i>				
	1	S413330085	<i>Bushing Ø12xØ14x11</i>				
	1	S4133200B3	<i>Bushing for support</i>				
17	5	M0606303	Screw M8x25 UNI 5931				
18	2	A74135100	Bearing Ø85xØ97x26				

*Available with service kit; see website www.harken.com

**Winch product sticker



Radial Winch 50.2 STCCC EL/HY

CCC = All-Chrome bronze

Pos.	Q.ty	Code	Description	Pos.	Q.ty	Code	Description
1	1	A96634000	Assy Base Winch 50 EL/HY <i>Base W50</i>	19	1	S413520080	Spacer
	1	S413350080	<i>Roller Ø6x19</i>	20	1	A96753100	Assy Central Shaft Winch 50 <i>Central Shaft Pred. W50</i>
	1	S4130900A7	<i>Bushing Ø22xØ25x8.5</i>		1	S413880002	<i>Washer Ø17.2xØ32x1.5</i>
	1	S414890080	<i>Bushing Ø9xØ11x7</i>	21			Winch Serial Number Sticker
	1	S413330085	<i>Bushing Ø12xØ14x11</i>	22	1	S4129400A0	Stripper arm support
2	1	S413020004	Gear Z12	23	1	S681070043	Drum C W50 CCC
3	1	S416050004	Pin	24	1	S281690097	Red line
4	1	S278170002	Washer Ø12.5xØ48x1.5	25	1	A96812100	Assy Jaws Winch 50 CCC <i>Lower Jaw W50 CCC</i>
5	1	S412800041	Gear Z30				<i>Upper Jaw W50 RAL9003</i>
6	1	S414260004	Pawls Carrier Ø8xN2		1	S414280080W	<i>Peeler W46 - 50 RAL9003</i>
7	6	S000080003	Pawl Ø8*		4	S385970001	<i>SPRING</i>
8	6	S000380001	Pawl Spring Ø8*	26	4	M0601803	Screw UNI EN ISO 1207 - M6x35 - A4
9	1	S415590041	Gear Z20	27	1	S413440019	Stripper Arm W50
10	1	S415610004	Pinion Z11	28	3	M6007103	Screw M6x50 UNI6107
11	2	A72821800	Roller Bearing Ø14xØ20x18	29	1	A76811400	Cover 2 speed W50 CCC
12	2	S281340080	Spacer roller bearings	30	1	A94149300	Assy Socket W35-80 EL/HY <i>Socket Handle W20/80</i>
13	1	S413120002	Washer Ø22.5xØ45x1		1	S414940085	<i>Washer Ø25xØ15x4</i>
14	1	S413070004	Pin Ø9xØ12x32.5		1	S414930003	<i>Nut Screw for Disconnect Rod</i>
15	1	A94156000	Assy Gear Z11 <i>Gear Z11</i>		1	M0679797	<i>O ring RC 2025 series</i>
	2	S414900080	<i>Bushing Ø12xØ14x8</i>	31			Winch Product Sticker**
16	1	A94134800	Assy Housing Winch 50 <i>Housing Winch 50</i>	32	1	S415070002	Disconnect Rod W50
	1	S414900080	<i>Bushing Ø12xØ14x8</i>				
	1	S413330085	<i>Bushing Ø12xØ14x11</i>				
	1	S4133200B3	<i>Bushing for support</i>				
17	5	M0606303	Screw M8x25 UNI 5931				
18	2	A74135100	Bearing Ø85xØ97x26				


*Available with service kit; see website www.harken.com

**Winch product sticker




Horizontal electric motor 12V / 24V / 48V


TOP VIEW

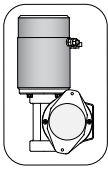


* **Motor installed in right-hand configuration.**

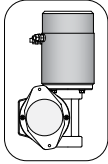

** **Motor installed in left-hand configuration.**

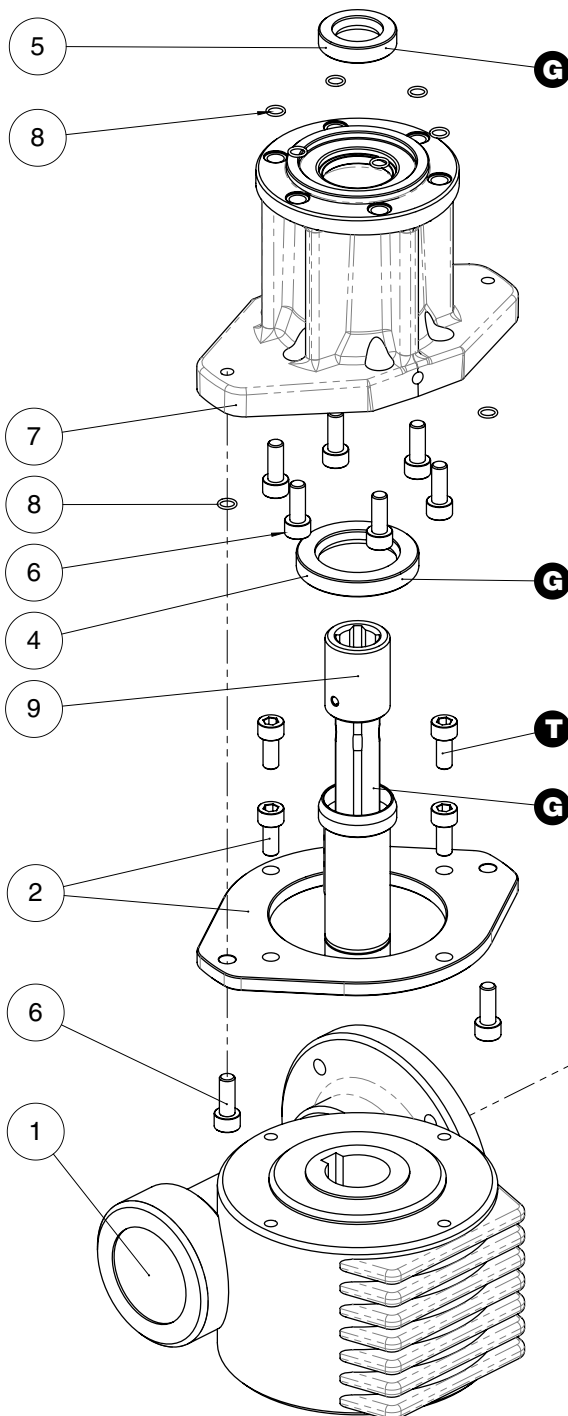


Pos.	Q.ty	Code	Description
1	1	A93127900	KIT Gear Reduction 1/24
	1	A94194900	KIT LM Gear Reduction 1/24
2	1	A94149200	KIT Assy Electric Motor Flange
	1	A94149200L	KIT Assy Electric Motor Flange Left
	4	M0606803	Electric Motor Flange Screw M6x14 UNI 5931
3	1	A96010700	KIT EL Motor 12V 1,5kW
	1	A96010600	KIT EL Motor 24V 2kW
	1	A97707300	KIT EL Motor 48V 2KW
	1	M6014206	Electric Motor Polarity motor sticker Screw stud M6x26 Washer Ø6 Nut M6 UNI5588 Key DIN 6885 5x5x15
4	1	M0612097	Sealer Ø30xØ47x7
5	1	M6007297	Lip seal Ø17xØ30x7
6	8	S415360003	Screw M6x16 UNI EN ISO 5931:2003 precote coating
7	1	S496650053	Horizontal Motorgear Flange
8	8	M6015697	O-Ring Seal ORM 0055-10 (Ø5,5 x Ø1)
9	1	A96589000	Performa KIT EL HO Motor Clutch
	1	M0601402	Shaft Motorgear HO
	1	M6020097	Performa HO Gear Motor Shaft
	1	S418620001	Hub GearMotor
	1	S414050080	Dowel UNI EN ISO 8752:2000- Ø4x24
	1	M6010303	O-ring 19.1x1.6 Disconnect spring Flange GearMotor Shaft HO Key 8x5x40 UNI 7511

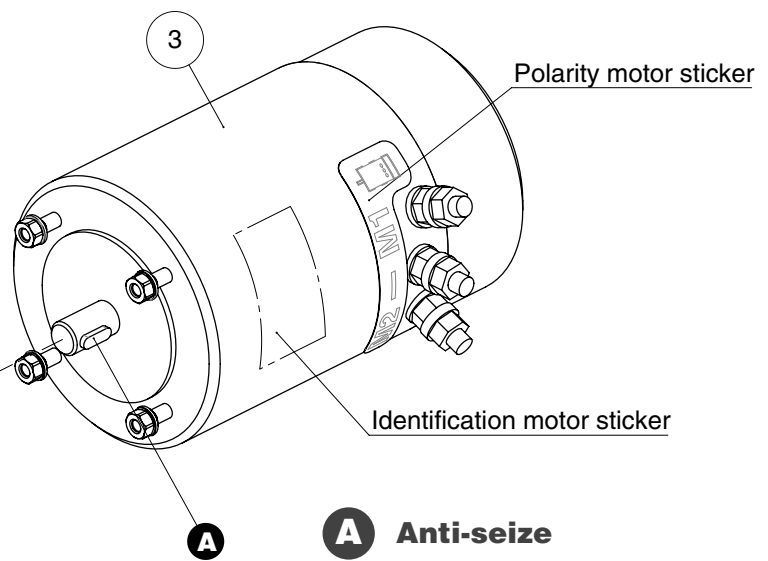

- A** Anti-seize
- G** Harken® Grease
- T** Axial Threadlocker

Vertical electric motor 12V / 24V / 48V

Pos.	Q.ty	Code	Description	Pos.	Q.ty	Code	Description
1	1	A94150500	KIT EL VT Motor Flange	3	1	G601070E	Electric motor 1.5 kW 12V
	1		Vertical Motorgear Flange			G601060E	Electric motor 2kW 24V
	1		Lip seal 17x30x7			G603390E	Electric motor 2kW 48V
	6		Seal Ø5,5 x Ø 1	4	1	M6014206	Key DIN 6885 5x5x15
	6	S415360003	Screw M6x16 UNI EN ISO 5931:2003	5	1	S717830052	Adaptation flange PAM90 B14 PAM71
	4	M0606303	Screw M8x25 UNI 5931	6	4	M0666603	Screw M6x16 UNI 5933
	4	M0602903	NUT M8 - UNI 5588 - A4	7	4	M7745103	Socket head screw UNI 5931 M8x14 A4
	4	M0603103	WASHER 8.4 U1751 DIN127 A4	8	1	S480730063	Sticker ISKRA motor
2	1	A94193700	KIT EL VT Motor Clutch	9	1	A93293700	KIT VT Gearbox (AS16F20.96)
	1		Connecting Coupling ø31.5		1		Vertical WormBox 20.96 B5 B5 P71/63
	1		Spring pin 5x40 DIN1481		1		Sticker for gearbox
	1	S326490001	Spring				
	1	S415030004	Toothed coupling				
	1	S415040080	Bushing				
	1	S329360080	Washer				
	1	M0666603	Screw M6x16 UNI 5933				

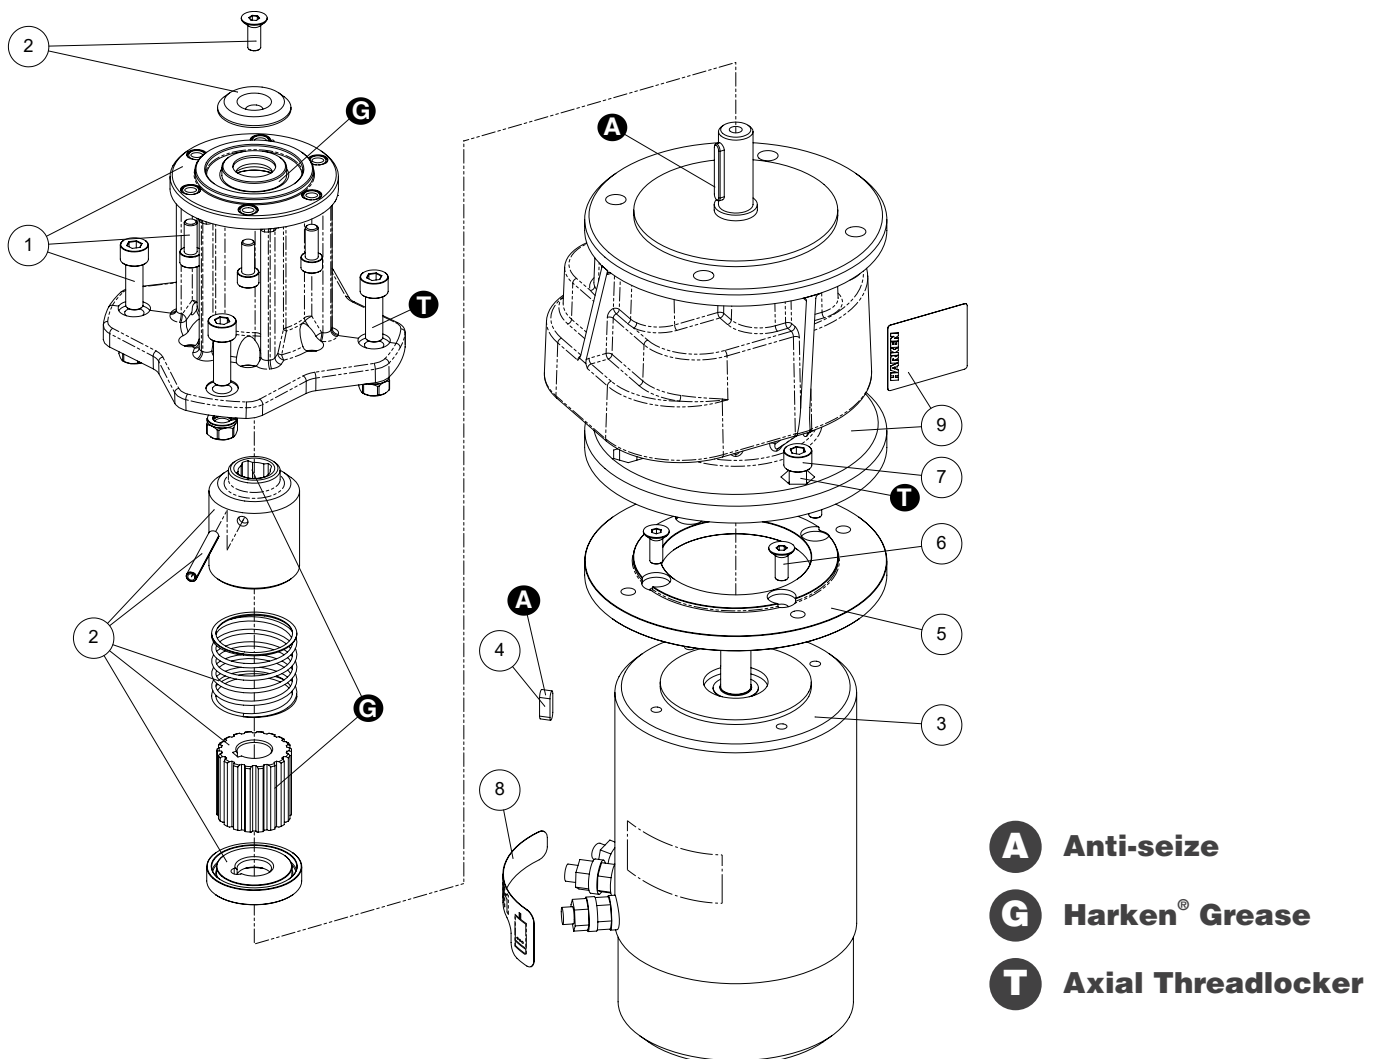

Hydraulic motor

Pos.	Q.ty	Code	Description	Pos.	Q.ty	Code	Description
1	1	G045942000Y	Hydraulic motor W46-60	4	1	A94149100	KIT HY Motor Flange W46-70
2	1	S415000080	Hydraulic Motor Spacer	6	1	S415360003	Hydraulic Motorgear Flange
3	1	A94193200	KIT Clutch HY Motor W46-70	6	1	M6015697	Screw M6x16 UNI EN ISO 5931:2003
			Toothed coupling	6	1	M6007297	O-Ring Seal ORM 0055-10 (Ø5,5 x Ø1)
			Connecting Coupling Ø31.5	1	1	M0621503	Lip seal Ø17xØ30x7
	1	M0620401	Spring pin 5x40 DIN1481	2	1	M0667103	Washer D.13 U1751 DIN127
	1	S415010080	Bushing	2	1		Screw M12x35 UNI5931
	1	S326490001	Spring				
	1	S329360082	Washer				
	1	M0635303	Screw M8x16 UNI6109				

