

# HARKEN®

USA – Tel: (+1) 262-691-3320 • Web: [www.harken.com](http://www.harken.com) • Email: [harken@harken.com](mailto:harken@harken.com)  
 Italy – Tel: (+39) 031.3523511 • Web: [www.harken.it](http://www.harken.it) • Email: [techservice@harken.com](mailto:techservice@harken.it)

## INSTRUCTIONS

### T-Track Genoa Lead Car

GT326S

Fits most 1 1/4" and 32 mm T-Track





**Strictly follow all instructions to avoid an accident, damage to your vessel, personal injury or death. See [www.harken.com](http://www.harken.com) for additional safety information.**

**IMPORTANT: See Inspection and Maintenance at end of manual.**


## Specifications

Part No.	Length		Width		Height		Max line Ø		Maximum working load		Breaking load		Track
	in	mm	in	mm	in	mm	in	mm	lb	kg	lb	kg	
GT326S	5 1/8	130	2 3/8	59	4 7/16	113	1/2	12	3000	1361	6000	2722	32 mm

## Parts List and Terms

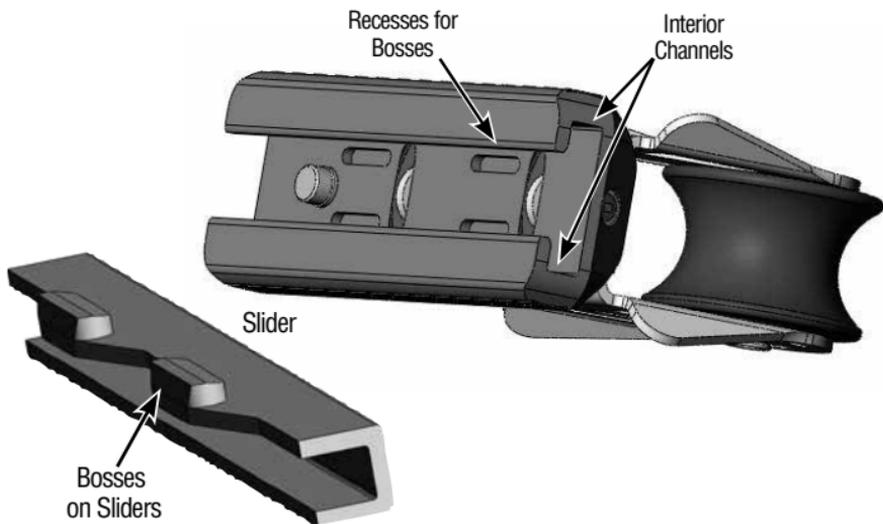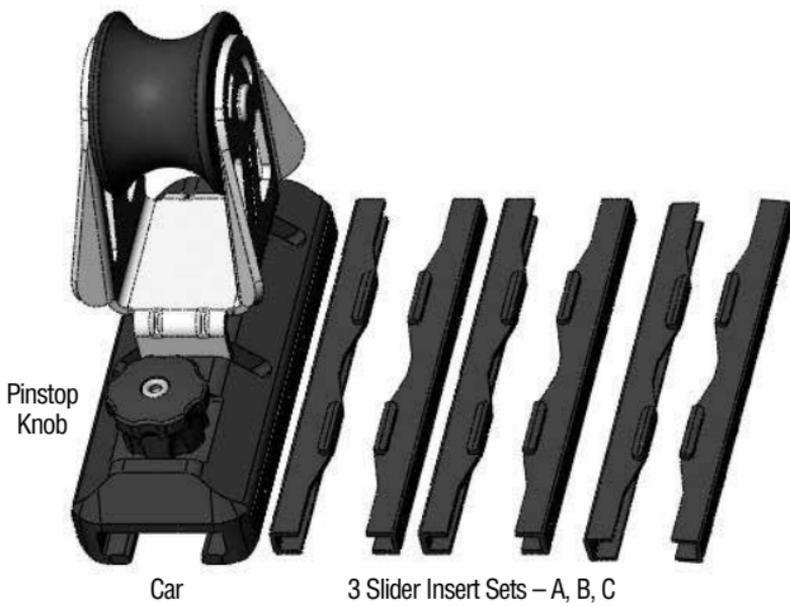

Choose one of three slider insert sets per the chart below. Note letter on side of sliders.

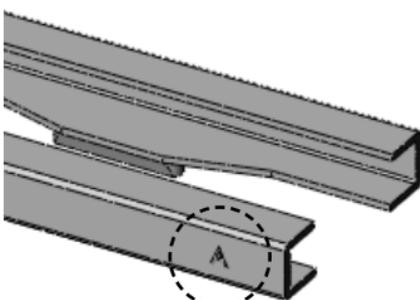


Letter designation on side of sliders

Track Manufacturer	Use Slider Marked	Harken Part No.	Order
Harken	A	H-53182	2
Pfeiffer			
Antal			
Goiot	B	H-53183	2
Lewmar			
Norseman			
Ronstan	C	H-53184	2
ABI			
Merriman			
Schaefer			
Taco			


## Check Slider

Start by slipping slider on side overhangs of "T" part of track. Slider should fit easily without too much play. To further check fit, slip inserts length-wise into one end of car about 1" (25mm) until tabs stop them. Slide car with partially inserted inserts onto end of track.

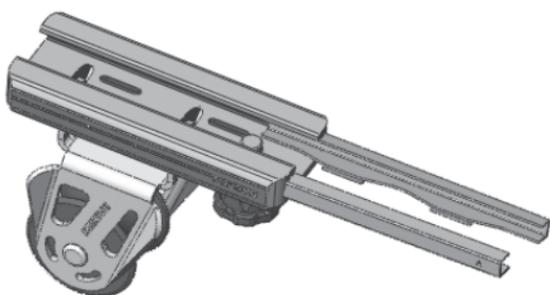

## Install Slider

Once slider is chosen, insert it into interior channels in a sideways direction as far as you can.

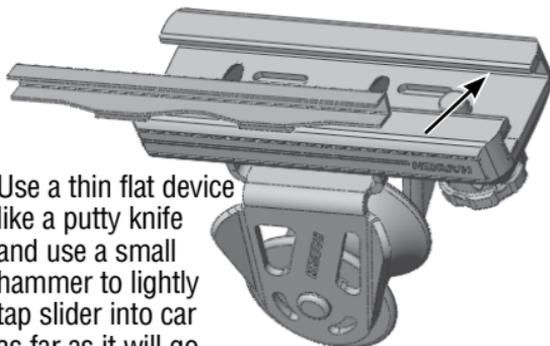

Use a thin flat device like a putty knife and use a small hammer to lightly tap slider into car as far as it will go.



Once slider is in channel, use a rod or screwdriver and tap the bosses into the recess on underside of car.

## Remove Sliders for Replacement

To remove sliders for replacement, use a screwdriver to pry tops down to dislodge bosses. Use a small screwdriver and small hammer to tap sliders out. Check chart for replacement part number.

## Install Car

Slide the car onto track so pinstop knob is forward.

Lift knob and adjust position, using various pinstop holes as required.

**Tip:** As a starting point, position car so that sheet points at center of sail luff. While under sail closehauled, check telltales and work towards having all lifting slightly with outside telltales flowing straight.



## Inspect

Frequently inspect line for deterioration and replace as necessary. Check block for signs of wear.

## Maintenance

**Traveler Cars:** Clean by frequently flushing with fresh water. Periodically clean car by squirting a detergent/water solution into center openings then flush with fresh water.

Apply one to two drops of McLube® OneDrop™ to contact surfaces of track. Slide car back and forth through OneDrop™ several times to distribute. Too much oil attracts dirt.

**Track:** Clean with detergent and water.

**Important!** Exposure to some teak cleaners and other caustic solutions can result in discoloration of part and is not covered under the Harken warranty.



## Warranty

For additional safety, maintenance and warranty information see [www.harken.com/manuals](http://www.harken.com/manuals) or the Harken® catalog.